



AL-436-00-902 EnoSense People Counter

EnOcean Sensor for people counting / PIR based
EnOcean 902 MHz

Part no. 12466 (beige) / 12467 (black) / 12468 (white)

Version 1.05, valid since FW/HW 1.0 / 1.1

© 2022 DEUTA Controls GmbH

All rights reserved

This Manual, including all figures and illustrations, is copyright-protected. Any further use of this Manual by third parties that violate pertinent copyright provisions is prohibited. Reproduction, translation, electronic and phototechnical filing/archiving (e.g., photocopying) as well as any amendments require the written consent of DEUTA Controls GmbH, Bergisch Gladbach, Germany. Non-observance will involve the right to assert damage claims.

DEUTA Controls GmbH

Paffrather Straße 140
51465 Bergisch Gladbach
Phone: +49 2202 28557-61
Fax: +49 2202 28557-79
E-Mail: info@deuta-controls.de
Web: www.deuta-controls.net

Every conceivable measure has been taken to ensure the accuracy and completeness of this documentation. However, as errors can never be fully excluded, we always appreciate any information or suggestions for improving the documentation.

E-Mail: info@deuta-controls.de

Table of contents

1	Validity of this documentation	5
2	Intended use	5
3	Disposal	6
4	Device description	6
4.1	Functionality	6
4.2	External product interface	6
4.3	Observe intended use	7
4.4	Observe statutory provisions for operating frequency range.....	7
4.5	Non-conduction mounting surface	7
5	Technical data	8
5.1	Communication / EnOcean wireless interface	8
5.2	Sensor: Motion / PIR	8
5.3	User interfaces	8
5.4	Housing / connection technology.....	8
5.5	Power supply.....	8
5.6	Environmental conditions	9
5.7	Dimensions and weight	9
5.8	Approvals	9
5.9	Standards and guidelines	9
6	Functional description in detail	10
6.1	People counting	10
6.2	Send learn telegram	10
6.3	Table of supported EEP's (EnOcean Equipment Profiles)	10
6.3.1	Transmit / TX	10
6.3.2	People counting / data transmission rules	12
6.3.3	Receive/ RX	12
7	Service / changing batteries	13
8	Safety remarks	13

9	Device labels	14
10	FCC (United States) Regulatory Statement	15
11	Dimensions / drawings	16
12	Ordering information	17
13	Revision history	19

1 Validity of this documentation

This documentation is only applicable to the product

AL-436-00-902 EnoSense People Counter


and is only applicable starting from products with FW/HW Version 1.0/1.1.

The device must only be installed and operated according to the instructions in these operating instructions.

2 Intended use

The **AL-436-00-902 EnoSense People Counter** must not be used in any relation with equipment that supports, directly or indirectly, human health or life or with applications that can result in danger for people, animals or real value.

The **AL-436-00-902 EnoSense People Counter** can be mounted above or besides a door, or can be mounted on any other smooth surface using a double-sided adhesive tape. The sensor element inside the device must be able to see to both directions, i.e. must not be blocked by a door frame or a wall. The mounting should look as shown in the following example (green is o.k.):

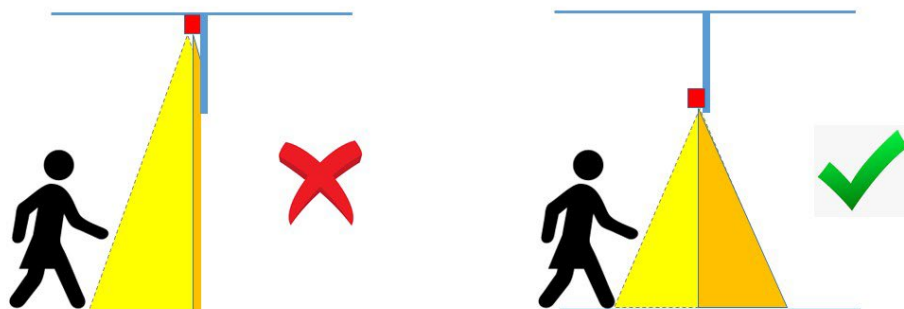

3 Disposal



Electrical and electronic equipment may not be disposed of with household waste. This also applies to products without this symbol.

Electrical and electronic equipment contain materials and substances that can be harmful to the environment and health. Electrical and electronic equipment must be disposed of properly after use.

Note only for EU: WEEE 2012/19/EU applies throughout Europe. Directives and laws may vary nationally.

4 Device description

4.1 Functionality

The **AL-436-00-902 EnoSense People Counter** offers the possibility to recognize passing people in both directions and to send the current count value via radio (EnOcean).

The sensor electronics, which are built into a plastic housing, are attached with a double-sided adhesive pad over the door (vertical detection) or on a door frame (horizontal detection).

Depending on your requirements, the sensor is available in a black, white or beige housing. In this case, the power is supplied by two internal AA batteries. Depending on the application, these typically last 5 years or more.

The information is transmitted via the EnOcean wireless standard (EEP: MSC, 47-D1-07-10).

The following information is currently available for the evaluation:


- Count value (with overflow): 8 bit, 0..255
- Battery voltage: 8 bit [mV/20]

4.2 External product interface

The external product interface consists of the following items:

- Lens opening of the passive infrared sensor for passing people detection
- Service button to send teach in / learn telegram

- Push area to open sensor (access to battery holder)

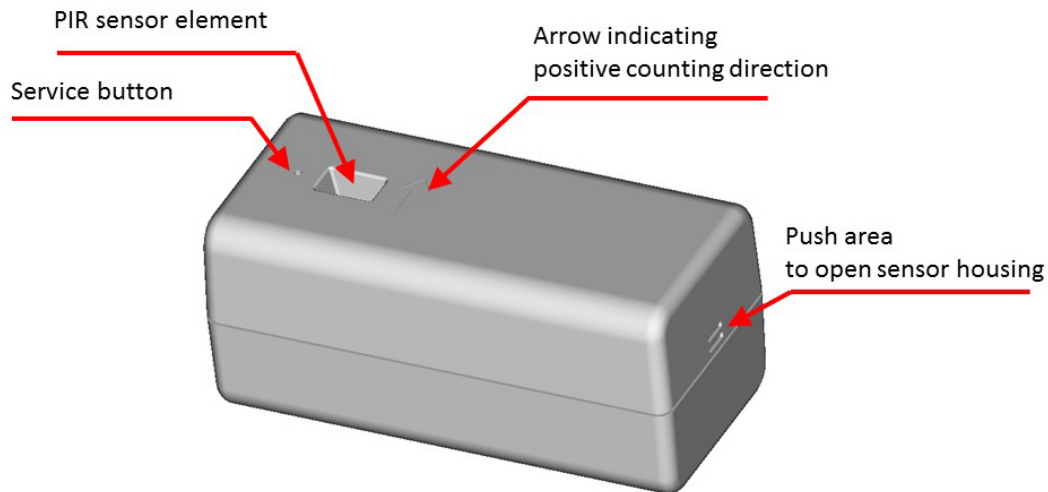

4.3 Observe intended use

The **AL-436-00-902 EnoSense People Counter** must not be used in any relation with equipment that supports, directly or indirectly, human health or life or with applications that can result in danger for people, animals or real value.

4.4 Observe statutory provisions for operating frequency range.

The **AL-436-00-902 EnoSense People Counter** must only be operated in compliance with the country-specific provisions regarding operation of radio equipment.

4.5 Non-conduction mounting surface

A non-conductive mounting surface is necessary.

Ensure the **AL-436-00-902 EnoSense People Counter** is mounted on a non-conductive surface. If it is not, performance may be adversely affected.

5 Technical data

5.1 Communication / EnOcean wireless interface

Type	EnOcean
Number	1
Transmit / receive center frequency	902.875 MHz
Maximum transmission power	+99 dBμV/m

Table 1: Technical data / communication

5.2 Sensor: Motion / PIR

Detection angle	120 degrees
Detection range	0.5 – 2 m

Table 2: Technical data / PIR sensor

5.3 User interfaces

Service button	Yes
Service LED	-

Table 3: Technical data / user interfaces

5.4 Housing / connection technology

Connection technology	-
Housing	Plastic, PC, white / black / beige

Table 4: Technical data / housing

5.5 Power supply

Power supply voltage	2x AA, 1,5V internal batteries
Power consumption	Typ. 1 mW, 50 μA standby

Table 5: Technical data / power supply

5.6 Environmental conditions

Operating temp.	15° .. 40 °C
Storage temp.	-20 ..+70 °C
Rel. humidity	0..99 % rel. humidity, non condensing
Protection class	IP20

Table 6: Technical data / environmental conditions

5.7 Dimensions and weight

Weight	87 g
Dimensions	36 x 37 x 80 mm

Table 7: Technical data / dimensions and weight

5.8 Approvals

FCC Rule parts	15.231
Equipment class	Part 15 Security / Remote control
ISED/IC (Canada)	Yes

Table 8: Technical data / tests and approvals

5.9 Standards and guidelines

EMC	EN IEC 61000-6-2 :2016 EN IEC 61000-3-2 :2019 EN 61000-3-3 :2013 EN 55032 :2012/AC :2013
-----	---

Table 9: Technical data / standards and guidelines

6 Functional description in detail

6.1 People counting


The **AL-436-00-902 EnoSense People Counter** will detect and count people passing by the sensor element, based on PIR technology.

Depending on the direction, counter will be incremented or decremented by one for each event.

6.2 Send learn telegram

To connect the **EnoSense People Counter** to any building automation system, a so called learn telegram can be send by the device.

Simply push the service button. The **EnoSense People Counter** will immediately a learn telegram.

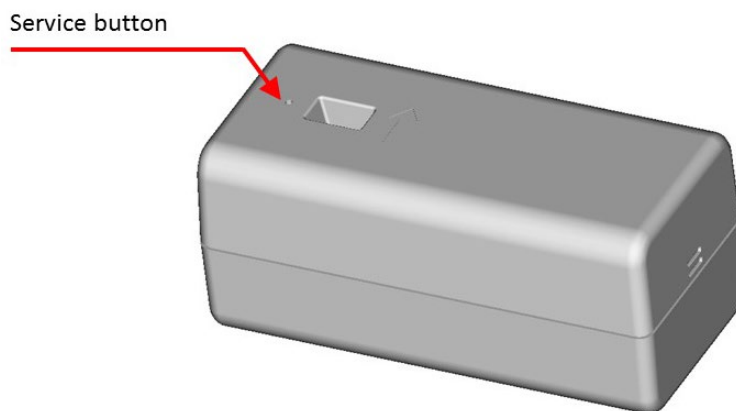

6.3 Table of supported EEP's (EnOcean Equipment Profiles)

6.3.1 Transmit / TX

The EnOcean wireless standard defines so called EnOcean Equipment Profiles (EEP). Each EnOcean based product sends and receives data according to at least one standardized data format. The **EnoSense People Counter** transmits data described as follows:

Cons. nr.	EEP	Description	Tx-ID
1	47-D1-07-10	Counting value, bit (BYTE 0)+ Power supply voltage, 8 bit (BYTE 3)	EURID

Table 10: Technical data / EnOcean EEP for TX

The following table describes in detail data send by the EnoSense People Counter according to the EEP 47-D1-07-10:

Offset	Size	Bitrange	Data	Shortcut	Description	Valid range	Scale	Unit
0	8	DB3.7...DB3.0	Supply voltage	SVC	Battery voltage	0..250	0...5.0	V
8	23	DB2.7...DB1.0	Not used (= 0)					
24	8	DB0.7...DB0.0	Counter value	CNT	Counter value	0..255	1	-

Table 11: EnOcean transmit data

MSC data structure

Data field	People	Data field	Voltage	Data field	Switch	Data field	Error
Offset	40	Offset	16	Offset	24	Offset	32
Size	8	Size	8	Size	8	Size	8
Range min / max	0 / 255	Range min / max	0 / 255	Range min / max	0 / 255	Range min / max	0 / 255
Scale min / max	0 / 255	Scale min / max	0 / 5.1	Scale min / max	0 / 255	Scale min / max	0 / 255
Unit	-	Unit	V	Unit	-	Unit	-
Meaning	Counter value	Meaning	Supply voltage	Meaning	Reserved	Meaning	Reserved

6.3.2 People counting / data transmission rules

Operational description of People counting / data transmission rules

The sensor works on the basis of two PIR sensors, which, depending on the signal, evaluate a counting pulse in the positive or negative direction. Each time motion is detected, the counter value changes accordingly. The changed counter value (+/-) is immediately sent via EnOcean.

As long as no motion is detected by the sensor element, no message will be transmitted by the EnoSense People Counter. The wireless transmitter will not be activated.

In the moment when a motion (people passing by) will be detected, the wireless transmitter will be activated and a data message will be transmitted by the People Counter immediately. A second message (sub telegram) will be send after 25 ms with the same data contents.

If no further motion is detected, the People Counter will not send any further message.

6.3.3 Receive/ RX

The **EnoSense People Counter** only sends EnOcean telegrams. No data is received / interpreted.

Cons. Nr.	EEP	Description
-	-	-

7 Service / changing batteries



Caution: When opening the device, you have to take care of electrostatic discharge. Otherwise, electronics can be damaged.

In case of discharged batteries, they can be replaced with two new AA batteries, 1.5 V.

You have to push the housing with your fingers within the marked area on the side of the EnoSense People Counter to open it.

2x AA batteries, 1.5 V
Take care of polarity!



8 Safety remarks



CAUTION: Risk of damage or explosion if a battery of incorrect type is used.



This product contains AA type batteries. If a battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.




Keep new and used batteries away from children.


9 Device labels

The following labels are placed on the bottom side of the EnoSense People Counter:

Label 1:

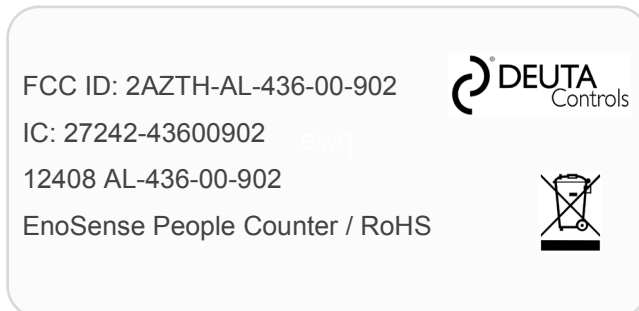

Label 2:

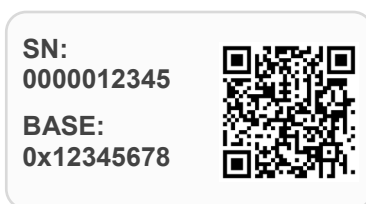

Label 2, Line 1+2: Serial number

Label 2, Line 3+4: BASE ID

QR-Code: <EURID>+<Product ID>+<Ordering Code>+<Serial Number>+<BASE ID>

10 FCC (United States) Regulatory Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

11 ISED (Canada) Regulatory Statements

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:


- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

12 Dimensions / drawings

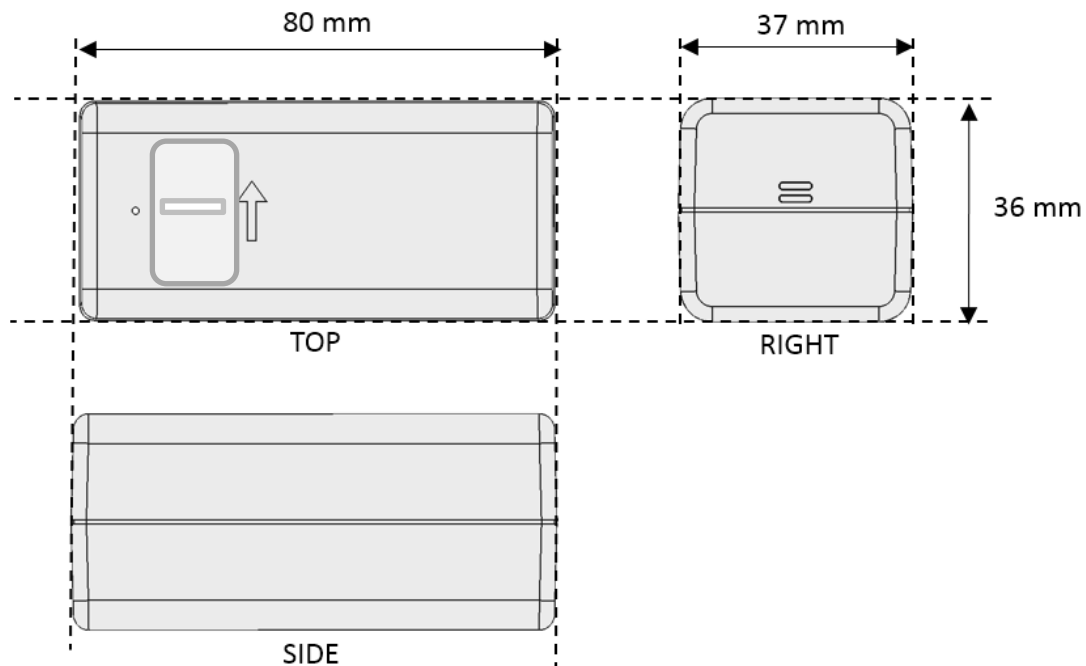

13 Ordering information

Part name	Part nr.	Description
AL-436-00-902 EnOcean sensor „EnoSense People Counter“ / beige / FCC	12466	Sensor EnOcean “EnoSense People Counter”, for counting people passing by (bi-directional); for mounting on smooth surfaces; EEP: 47-D1-07-10; Supply voltage 2x AA 1.5 V internal, Dimensions 36 x 37 x 80 mm, EnOcean 902 MHz, FCC, Housing: PC, beige (similar to RAL 9010 / pure white); incl. adhesive pad
AL-436-00-902 EnOcean sensor „EnoSense People Counter“ / black / FCC	12467	Sensor EnOcean “EnoSense People Counter”, for counting people passing by (bi-directional); for mounting on smooth surfaces; EEP: 47-D1-07-10; Supply voltage 2x AA 1.5 V internal, Dimensions 36 x 37 x 80 mm, EnOcean 902 MHz, FCC, housing: PC, Signal black (RAL 9004); incl. adhesive pad;
AL-436-00-902 EnOcean sensor „EnoSense People Counter“ / white / FCC	12468	Sensor EnOcean “EnoSense People Counter”, for counting people passing by (bi-directional); for mounting on smooth surfaces; EEP: 47-D1-07-10; Supply voltage 2x AA 1.5 V internal, Dimensions 36 x 37 x 80 mm, EnOcean 902 MHz, FCC, housing: PC, Signal white (RAL 9003); incl. adhesive pad;

List of tables

Table 1: Technical data / communication	8
Table 2: Technical data / PIR sensor	8
Table 3: Technical data / user interfaces	8
Table 4: Technical data / housing	8
Table 5: Technical data / power supply	8
Table 6: Technical data / environmental conditions	9
Table 7: Technical data / dimensions and weight	9
Table 8: Technical data / tests and approvals	9
Table 9: Technical data / standards and guidelines	9
Table 10: Technical data / EnOcean EEP for TX	11
Table 11: EnOcean transmit data	11

14 Revision history

Version	Author	Reviewer	Date	Major changes
1.00	Lehzen	Pohl	15.06.2021	Initial release
1.01	Lehzen	Pohl	19.11.2021	Adopted data transmission to optimize power consumption
1.02	Lehzen	Pohl	01.12.2021	Removed FCC §15.101 statement in 10; Added/changed functional description
1.03	Lehzen	Pohl	22.04.2022	Changed pictures; added MSC description
1.04	Lehzen	Pohl	23.08.2022	Added ISED statements Changed label 1
1.05	Lehzen	Pohl	29.08.2022	Changed label 1 contents

----- End of document -----